




Bassinet & Bedside Sleeper

Model 8400 Instruction Manual

Scan below
for quick video
assembly guide:

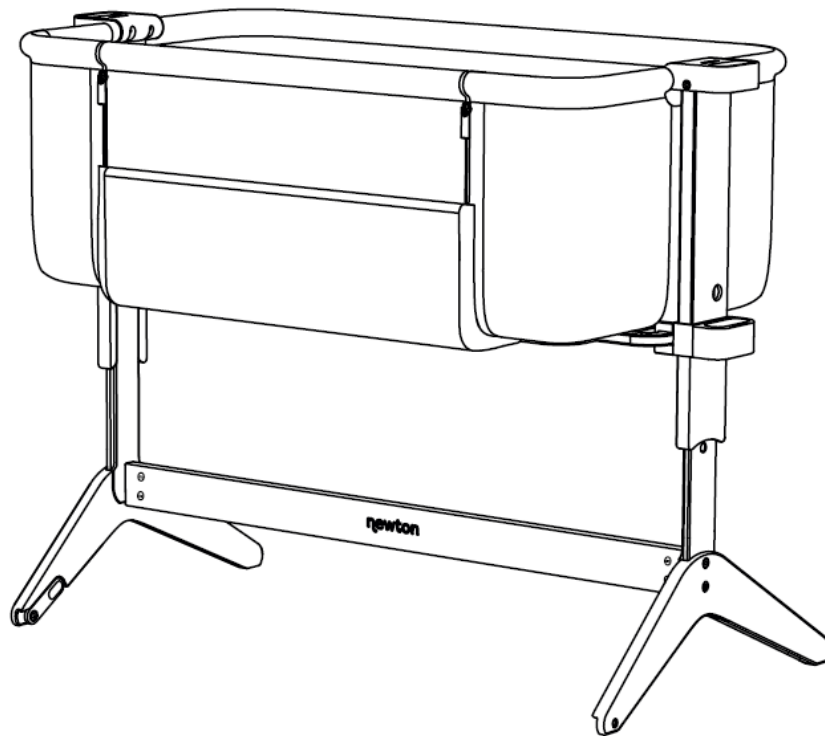

IMPORTANT

- Read all instructions before assembling and using the product.
- Keep instructions for future use.
- Any questions? Please feel free to contact us at (800)686-3986 or info@newtonbaby.com. We're always happy to help.

MAN8400-20220614

WARNING

Failure to follow these warnings and the instructions could result in serious injury or death. Keep instructions for future use. Assemble product according to the instructions for ANY use mode- Bedside Sleeper and Bassinet mode.

FALL HAZARD

To help prevent falls, do not use this product when the infant begins to push up on hands and knees, can roll over or has reached 20 lbs (9 kg), whichever comes first. Move your child to another sleeping product when your child reaches this stage.

- In freestanding bassinet mode, ensure that side panel is raised with zippers fully closed and top bar locked into the frame.
- Never leave infant in bassinet with side panel down unless it is securely positioned in bedside sleeper mode and attached to the adult bed with fixing buckles and straps securely in place.

SUFFOCATION HAZARD

Infants have suffocated:

- In gaps between extra padding and side of the bassinet, and
- On soft bedding

Use only the pad provided by Newton Baby, Inc. NEVER add a pillow, comforter, or another mattress for padding.


- If a sheet is used with the pad, use only the one provided by Newton Baby, Inc.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their back to sleep, unless otherwise advised by your physician.

ENTRAPMENT HAZARD

- To prevent death from entrapment, bedside sleeper must be properly secured to adult bed using the attachment system.
- There must be no more than ½ in. (13 mm) gap between bedside sleeper and adult bed.
- Check tightness before each use by pulling bedside sleeper in a direction away from adult bed.
- If gap exceeds ½ in. (13 mm), DO NOT use product. Do not fill the gap with pillows, blankets or other items that are suffocation hazards.
- Always read and follow assembly instructions for each product use mode (bedside sleeper, bassinet).
- Always use ALL required parts for each use mode. Check instruction manual for a list of required parts. Periodically check product for loose, damaged, or missing parts. DO NOT use bedside sleeper if any parts are missing, damaged, or broken. Contact Newton Baby, Inc. for replacement parts and instructional literature if needed.
- A bedside sleeper is designed to provide a sleeping area for an infant until he or she begins to push up on hands and knees or approximately 5 months of age. Move your child to another sleeping product when your child reaches this stage. DO NOT substitute parts.

This bedside sleeper is designed for use only with adult beds that are between 19.5 and 25 inches (49.5 and 63.5 cm) from floor to top of adult mattress.

- To avoid death from the infant's neck being caught on the top rail on the side that is next to the adult bed, the top rail must be no higher than the adult bed mattress.

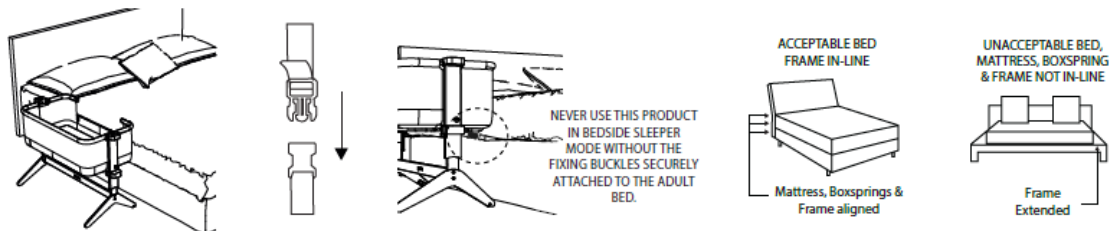

- Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a bassinet or attach strings to toys. Do not place near window or patio door where child could reach the cord of a blind or curtain and be strangled.

Parts List




Check that all parts listed below are included in your package.

If there are any missing parts, contact Newton Baby for replacements before use.

Part #	Part Name	Quantity
A	Main bassinet frame	1
B	Pad support frame	2 parts
C	Height adjustment handles	2
D	Bottom crossbar	1
E	Feet	2
F	Fabric bassinet	1
G	Sleeping pad	1
H	Fitted sheet	1
I	Fixing straps (with buckle & anchor plate)	2
J	Carry bag	1
K	Allen head bolts	4
L	Barrel nuts	4

Tools provided:


1 x Allen Key

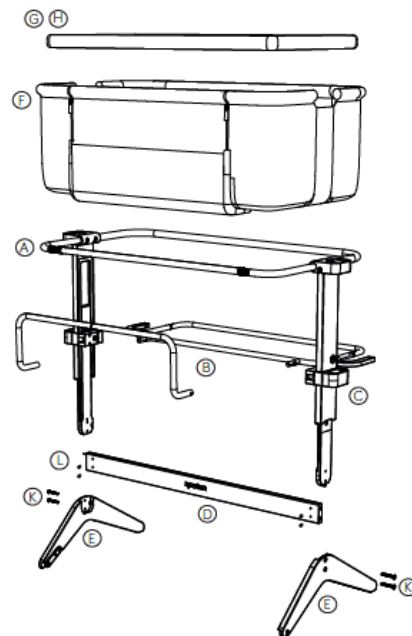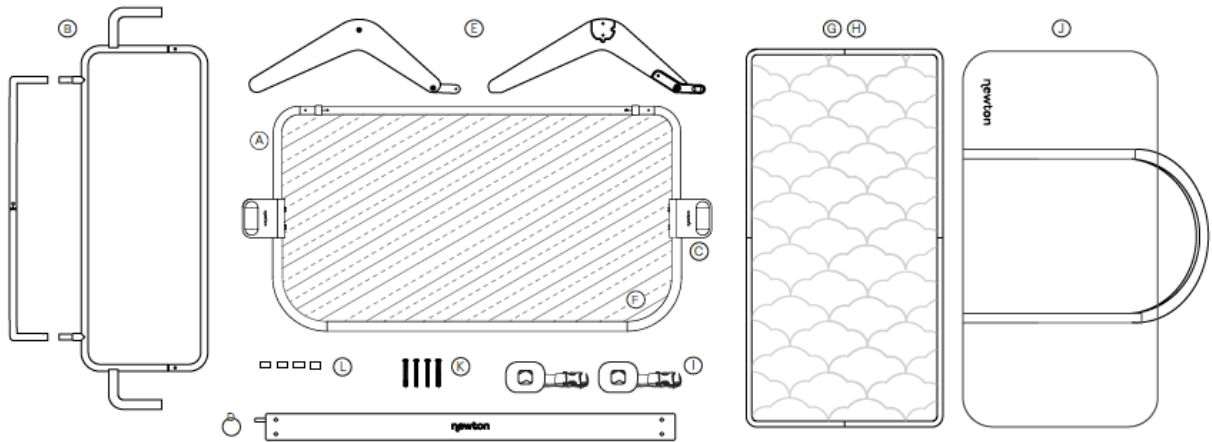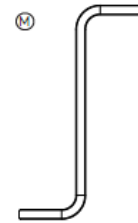

Bassinet Mode


Step 1

Lay the main bassinet frame (A) on its back and spread legs to open.

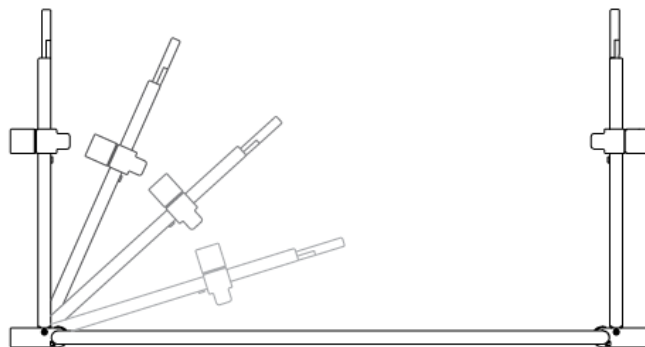


Step 2

Insert bent side rail into pad support frame (B) for snap buttons to click securely into the corresponding holes.

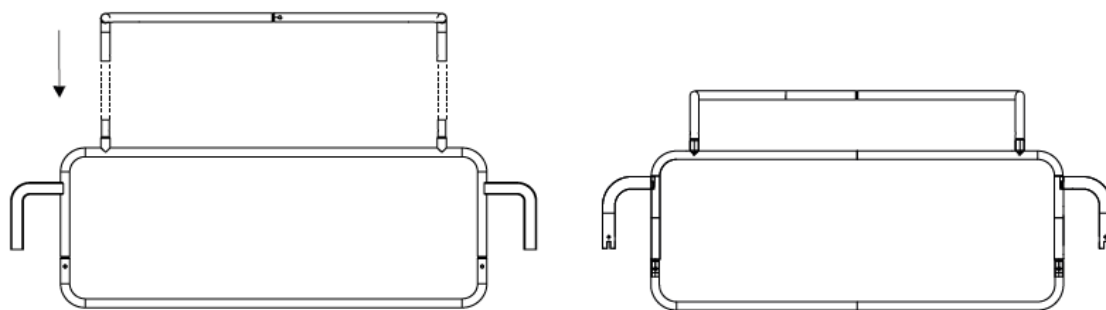


Step 3

Hold the assembled pad support frame (B) with the bent side rail facing down, then slide both arms into height adjustment handles (C) on legs of main bassinet frame (A) until they click securely into both sides.

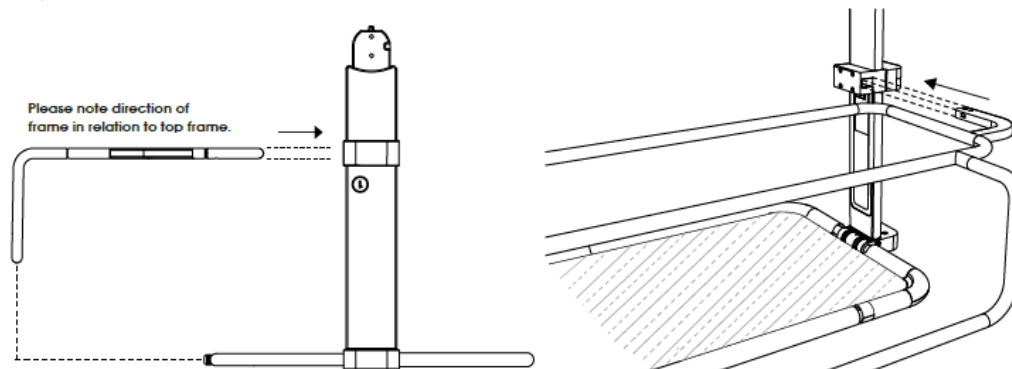


Step 4

Attach bottom crossbar (D) to the base of the vertical legs. Line up dowel pin into slots and ensure logo orientation matches image.

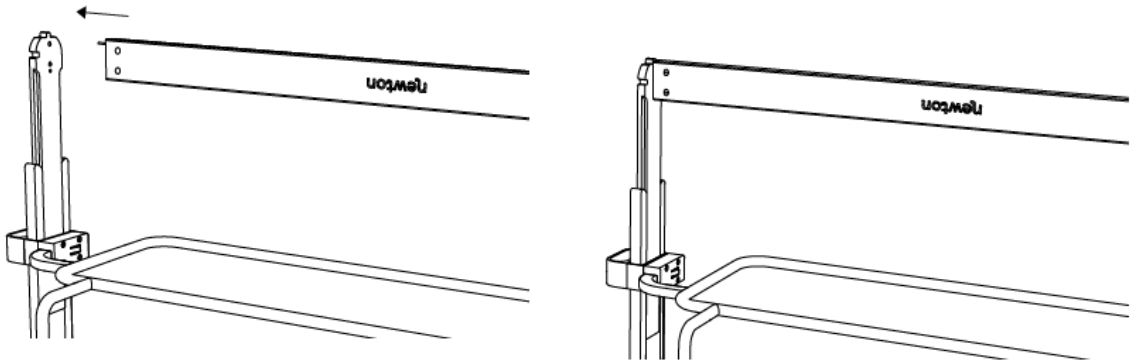



Step 5

Attach feet (E) to base of vertical legs using 4 x Allen head bolts (K) and 4 x barrel nuts (L) with Allen key (M). Ensure mini feet are facing towards the bent side rail.

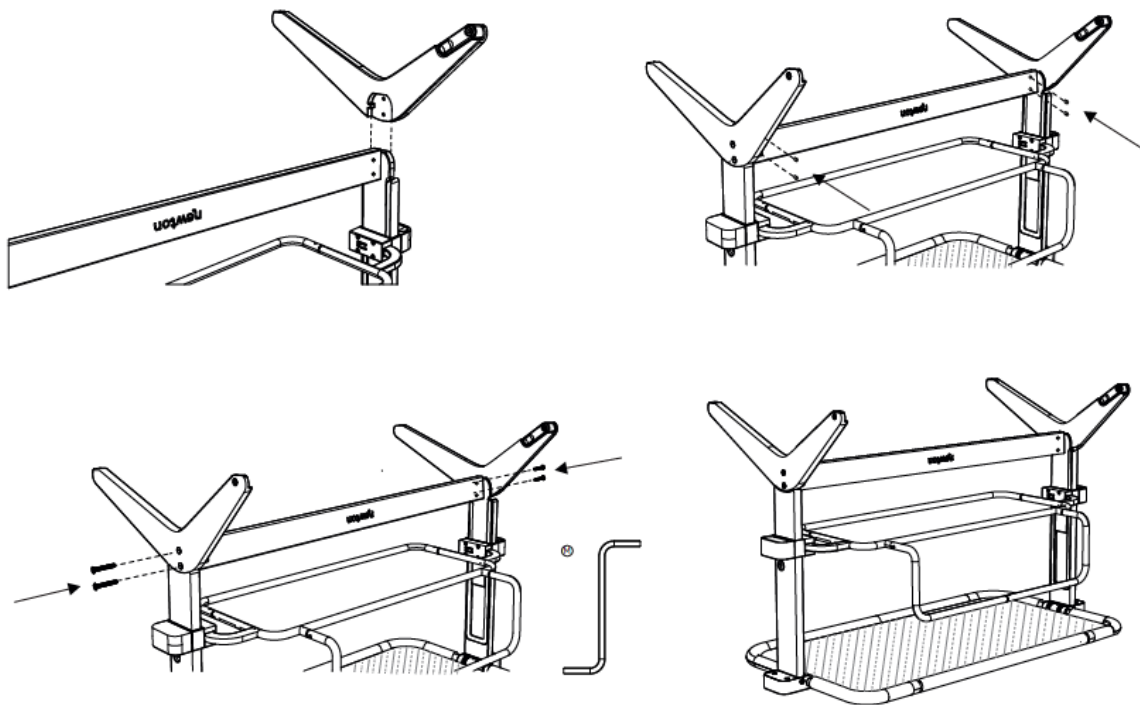


Step 6

Lift and slide the side panel pocket of the fabric bassinet (F) over the bent bar of pad support frame (B). Then secure the hook and loop fastener tabs on the underside of the fabric bassinet (F) onto pad support frame (B) on the outside of the bent side rail.

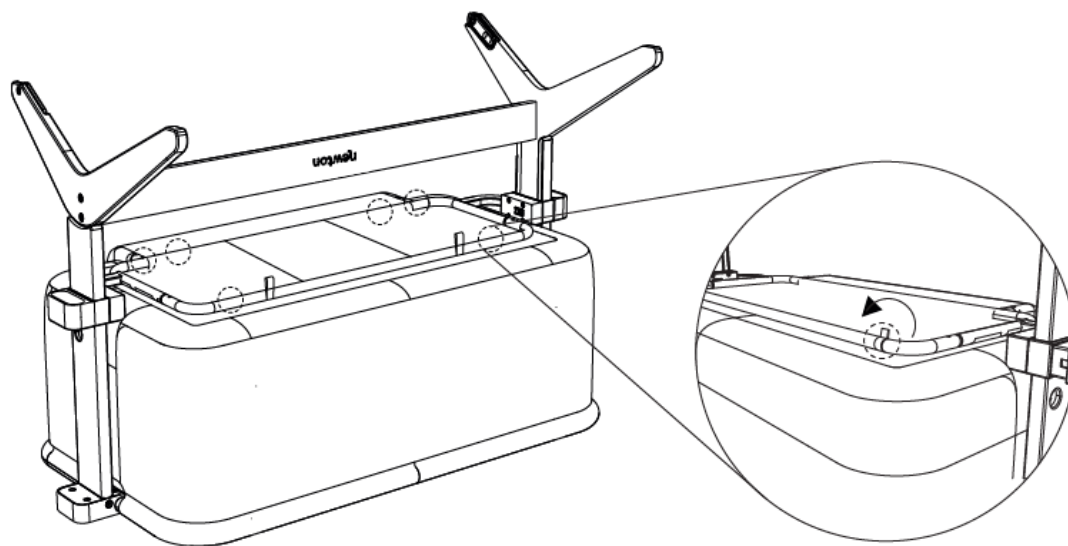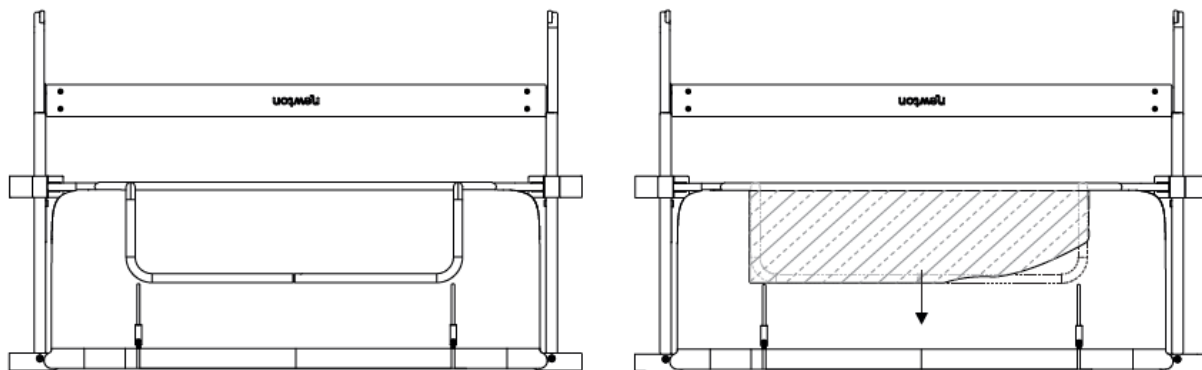


Step 7

Fold out mini feet for added stability.

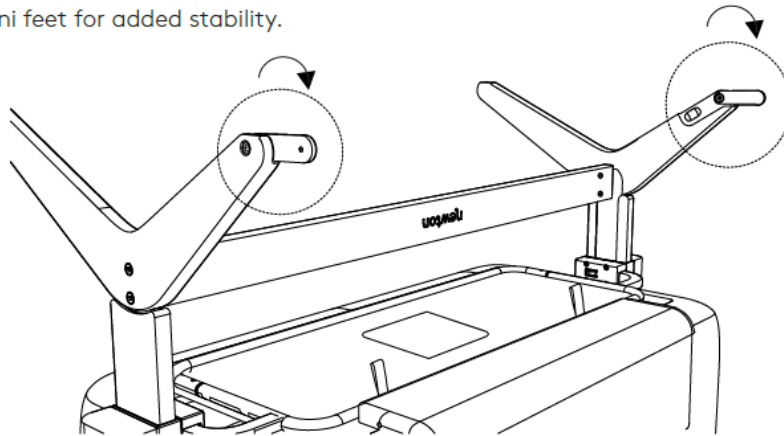


Step 8

Turn the bassinet upright so it is standing up on its feet.

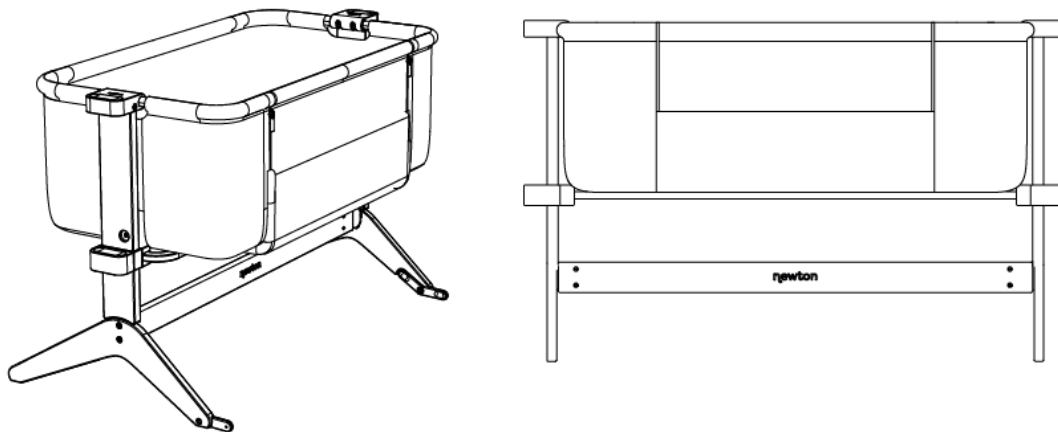


Step 9

Slip on fitted sheet (H) over the sleeping pad (G).

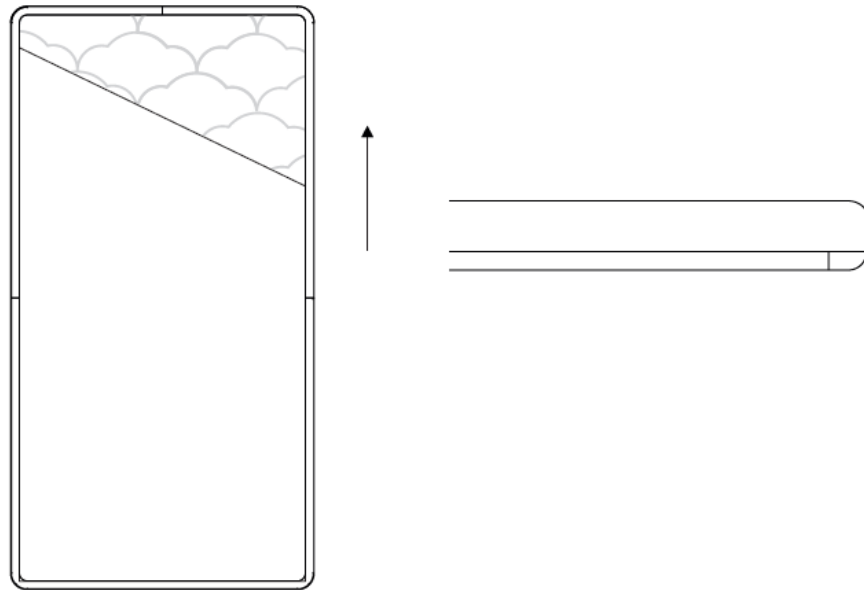


Step 10

Insert the sleeping pad (G) into the fabric bassinet (F) so that the hard side is flat on the bottom.

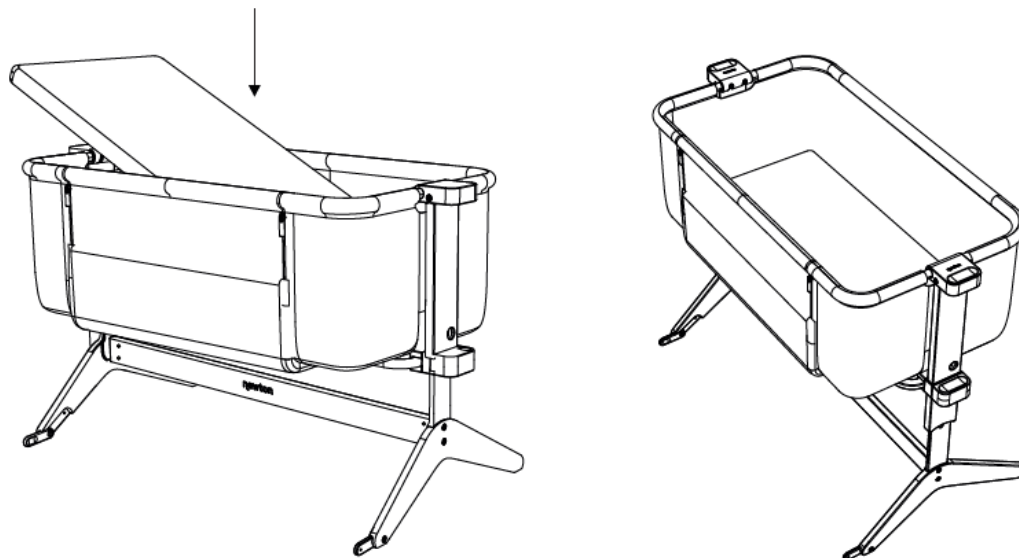

Step 11


Store instruction manual, Allen key (K), fixing straps (I), and carry bag (J) in pouch located on underside of fabric bassinet (F).

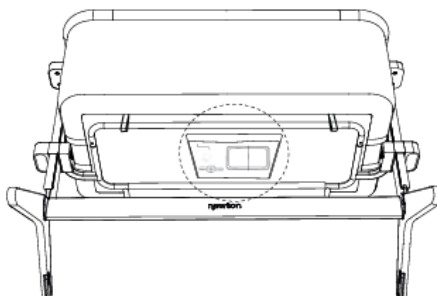


To Adjust the Height

Step 12

The bassinet can be height adjusted. ALWAYS ensure that the sleep surface is flat and not inclined. Inclined sleep surfaces can create hazardous conditions. To adjust, locate the height adjustment handles (C) on both sides of the product. Pull handles out, move product higher or lower to desired position. Push handles in to lock into place.

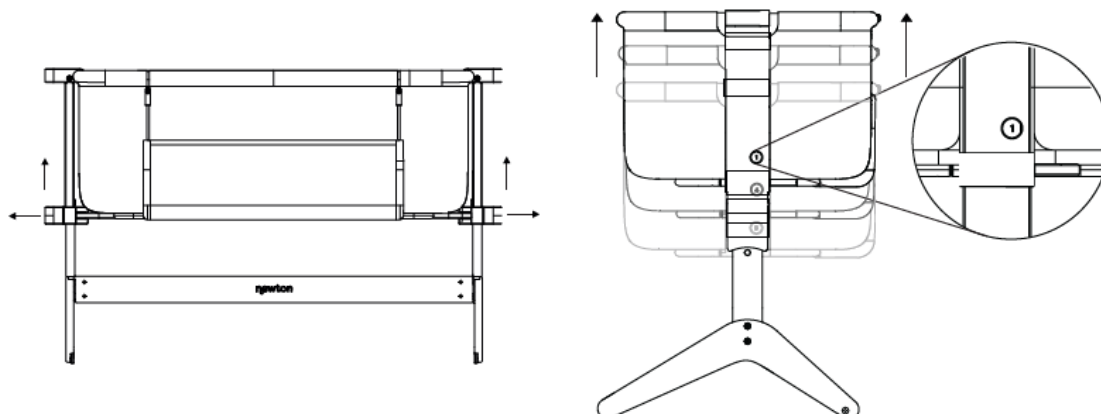


⚠ WARNING: Remove infant from bassinet before making any adjustments to the bassinet. Ensure both height adjustment handles (C) are set to the same number setting (1, 2, 3, 4, 5, 6, 7 or 8) to ensure a level sleeping surface. The sleep surface should NEVER be inclined by adjusting the legs to different heights.

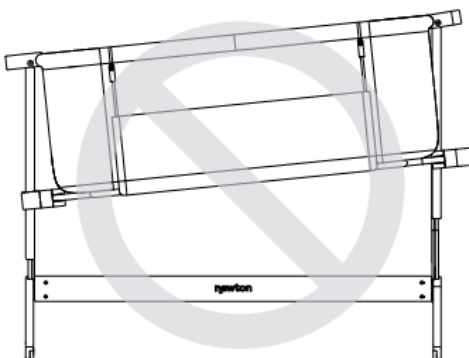


To Fold and Store the Bassinet

Step 13


Using height adjustment handles (C), adjust bassinet to the lowest height setting.

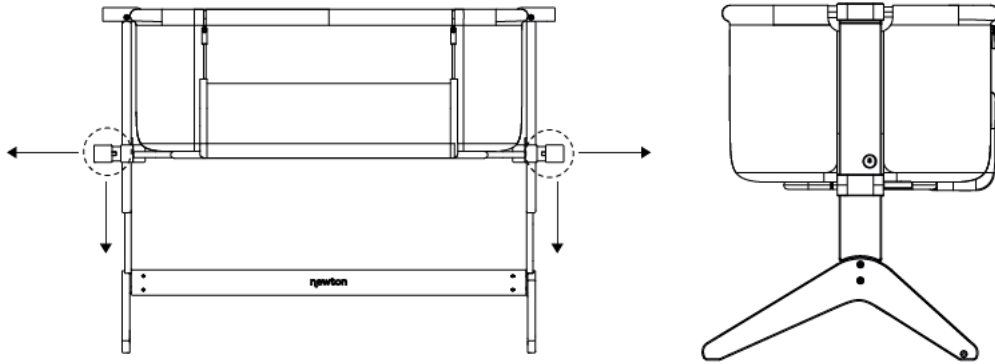


Pull out the sleeping pad (G).

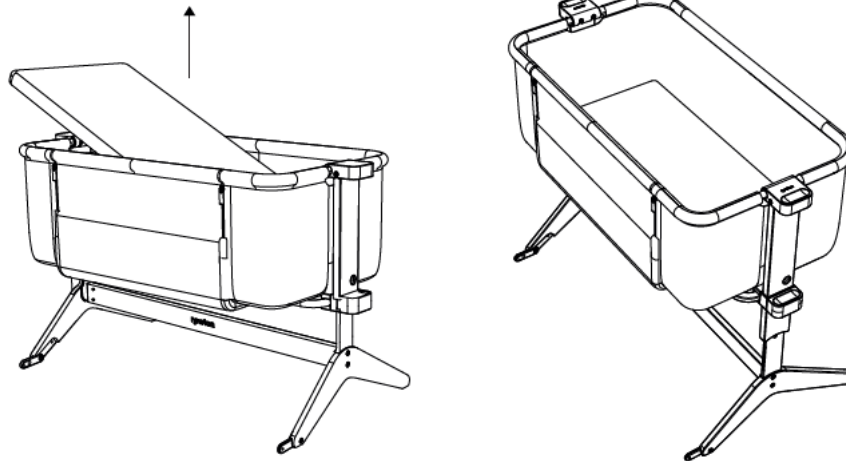

Flip bassinet upside down. Unscrew and remove bottom crossbar (D) and store Allen head bolts (K) with barrel nuts (L) and Allen key (M) in pouch on underside of fabric bassinet (F) to prevent loss.

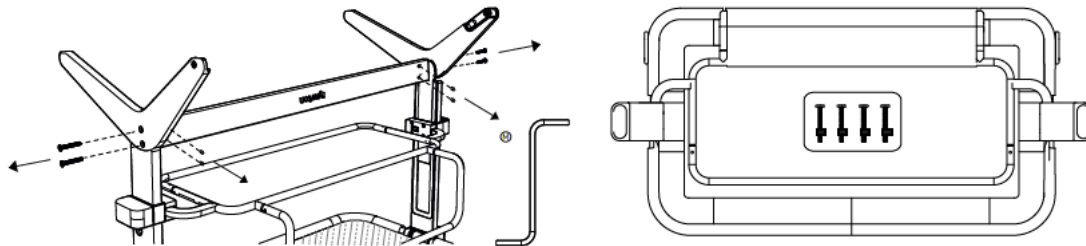


Release the hook and loop fasteners from pad support frame (B).

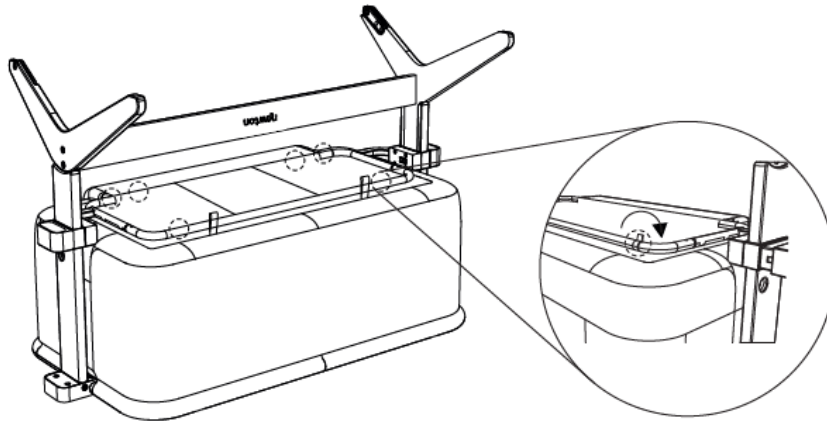


Step 14

Press in release tabs on inner side of the height adjustment handles (C) to slide out pad support frame (B).

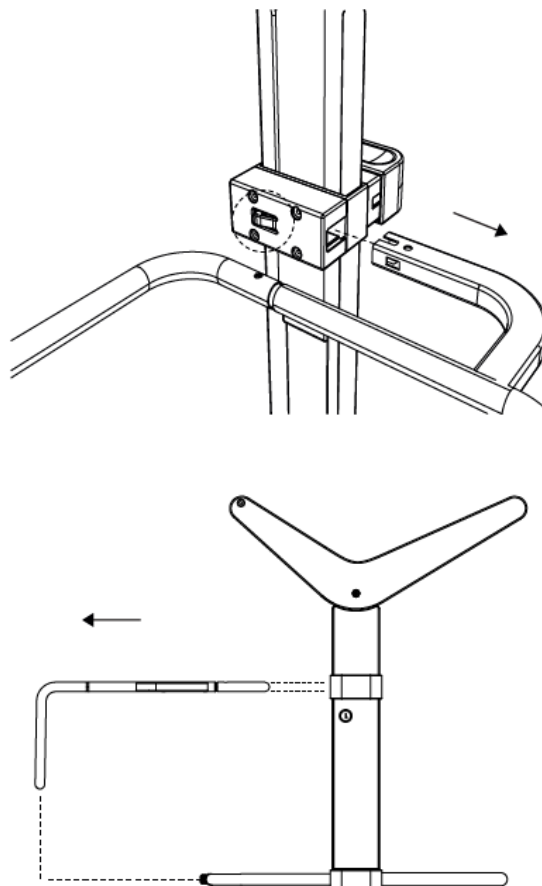


Step 15


Swing both legs into main bassinet frame (A) and neatly fold in fabric bassinet (F) to collapse the structure flat.

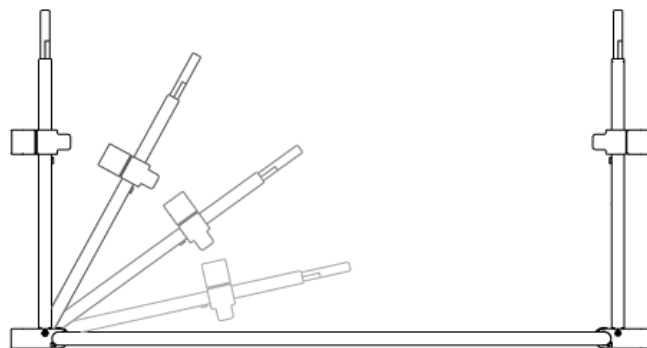

Separate bent side rail from pad support frame (B) by pressing both snap buttons in while pulling the components apart.

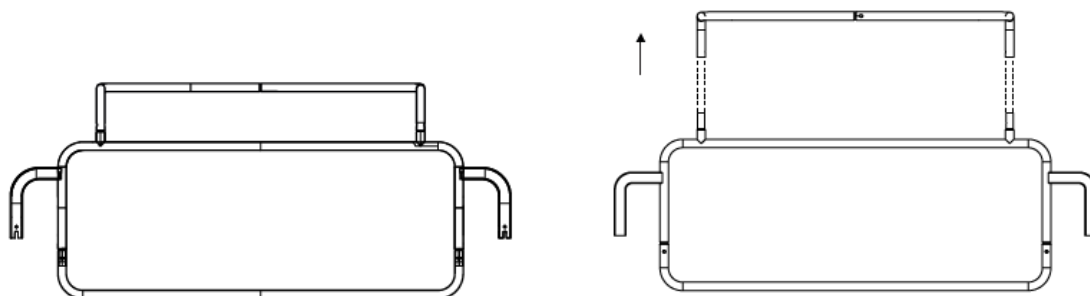


Align and stack over the sleeping pad (G). Stack the pad support frame (B), bottom crossbar (D) and the feet (E) on top and gently slide pile into carry bag (J). Zip bag closed.

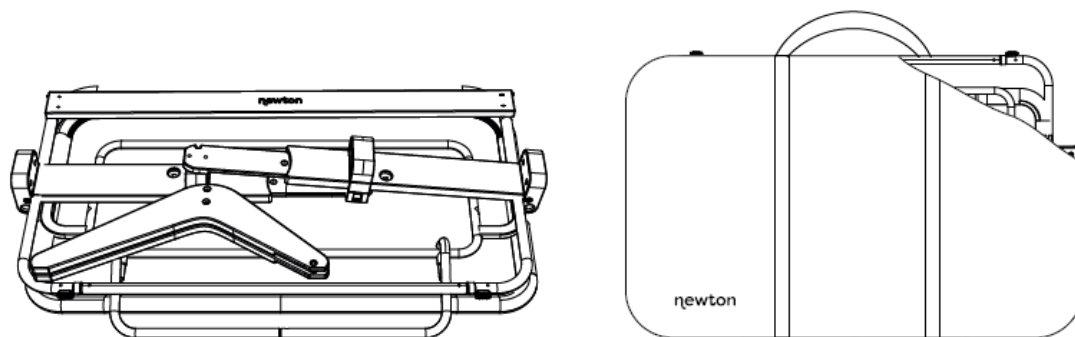


Bedside Sleeper Mode

Compatible Beds

✓ ACCEPTABLE BED
FRAME IN-LINE

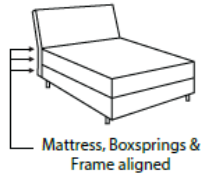

✗ UNACCEPTABLE BED,
MATTRESS, BOXSPRING
& FRAME NOT IN-LINE

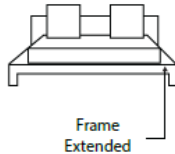


This bedside sleeper is designed for use only with adult beds that are between 19.5 and 25 inches (49.5 and 63.5 cm) from floor to top of adult mattress.

⚠ WARNING: Fall Hazard: Remove infant from bassinet before converting to bedside sleeper.


Step 16

Fully unzip both side panel zippers on fabric bassinet (F).

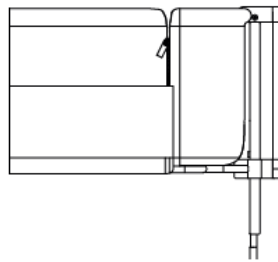

Step 17

Slide the side panel top rail lock lever and lift to release out of the side locks on both sides. Slide out rail and store it securely in the elastic bands on underside of fabric bassinet (F). Fold the empty side panel down on the outside of the bassinet to form the infant access opening.

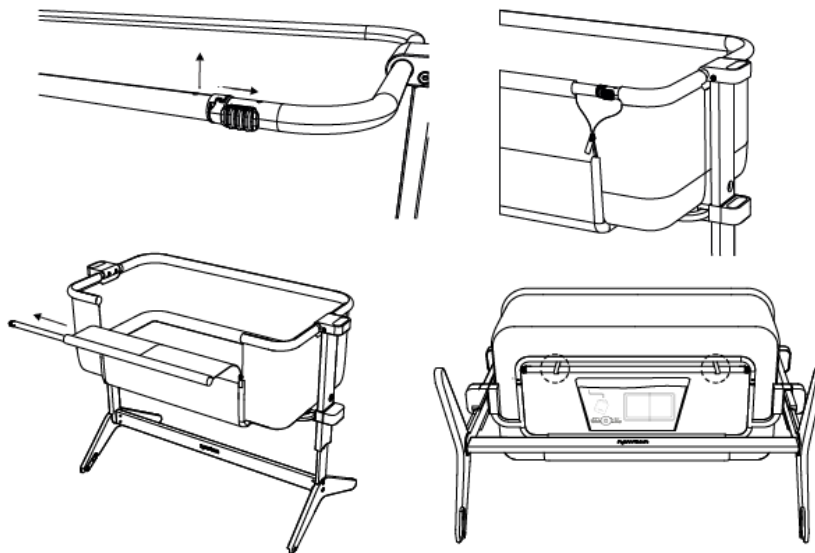


Step 18

Position the bedside sleeper with access side against the parent's bed. The top of the side support on the access side should align with the top of the adult mattress. Follow Step 12 to adjust bedside sleeper height.




⚠ WARNING: To avoid death from the infant's neck being caught on the top rail on the side that is next to the adult bed, the top rail must be no higher than the adult bed mattress.

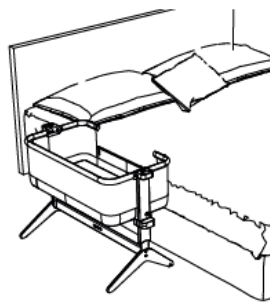

Step 19

Affix the bedside sleeper to the parent's bed using the two fixing straps, each with buckle and anchor plate (I). Connect each strap end to each side of the bassinet by securely clicking each buckle closed. Slide each fixing strap under and straight across the adult mattress as shown. Then place the anchor plate flush against the side of the mattress away from the bassinet. Make each fixing strap connection as tight as possible against the parental bed so the bassinet creates a slight indentation into the mattress.

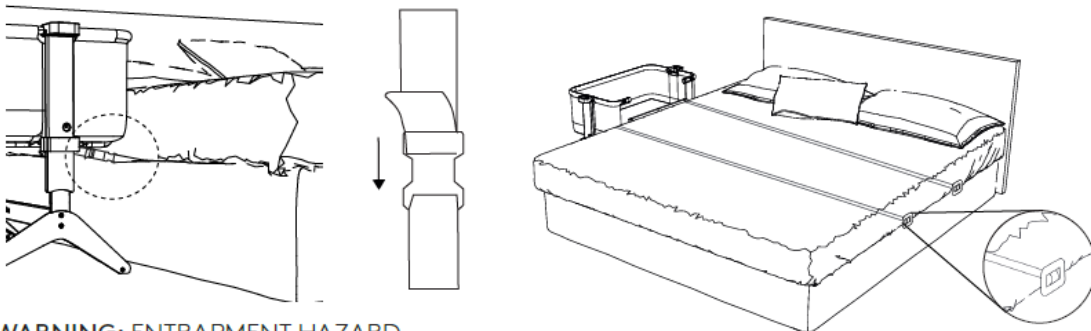


⚠ WARNING: ENTRAPMENT HAZARD

- To prevent death from entrapment, bedside sleeper must be properly secured to adult bed using the attachment system.
- There must be no more than ½ in. (13 mm) gap between bedside sleeper and adult bed.
- Check tightness before each use by pulling bedside sleeper in a direction away from adult bed.
- If gap exceeds ½ in. (13 mm), DO NOT use product. Do not fill the gap with pillows, blankets or other items that are suffocation hazards.
- Suffocation Hazard: Ensure that adult bedding does not enter or cover the bedside sleeper.

Step 20


To separate the bedside bassinet from the adult bed, release the set of buckles attached to the legs of the main bassinet frame (A). Never perform any conversion with infant inside bedside bassinet! To transform bedside sleeper back to bassinet mode, ensure that the side panel top rail is securely locked on both ends to the main bassinet frame (A) and fully zippered closed on both sides of the adjustable side panel.

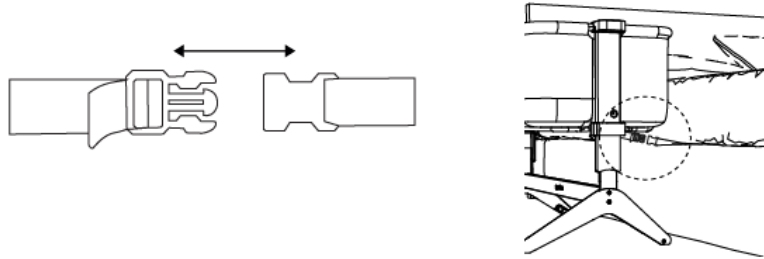

Fabric Bassinet Removal for Cleaning


Step 21

Remove the sleeping pad (G) from the bassinet. Release the hook and loop fastener tabs from the pad support frame (B).

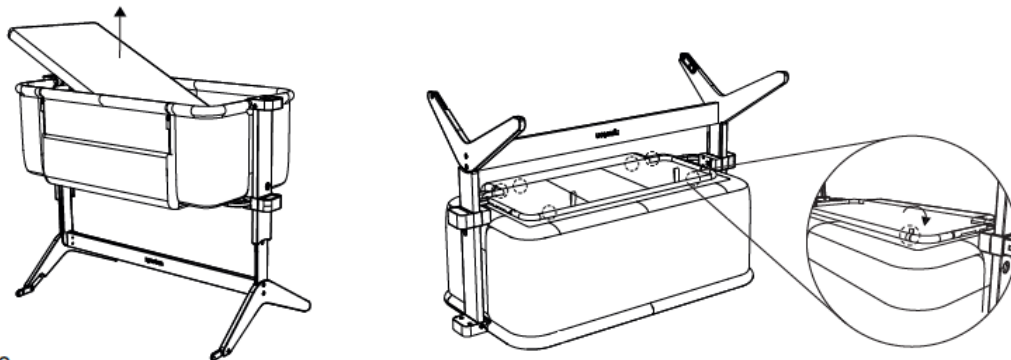


Step 22

Follow Step 17 to release the side panel top rail of fabric bassinet (F). Slide out the top rail. Ensure top rail is re-inserted after laundering and before use!

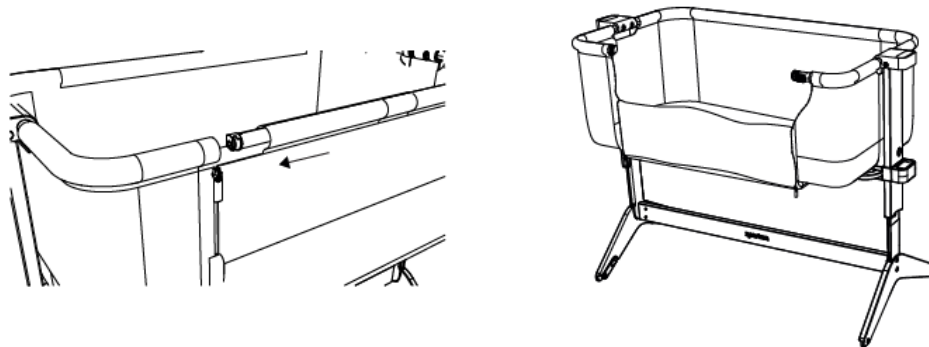

Step 23

Unzip the fabric bassinet (F) zipper underneath the fabric lip on the top of main bassinet frame (A). Carefully lift the fabric bassinet (F) off the main bassinet frame (A) to avoid any damage from snagging on parts.

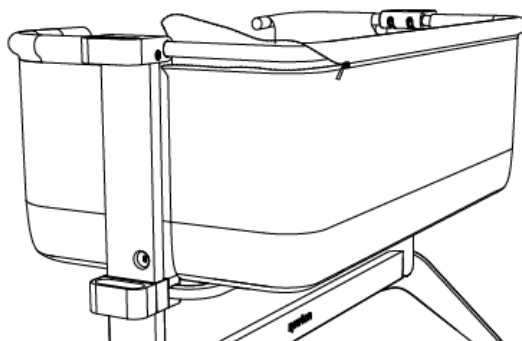

Step 24

Machine wash cold on gentle cycle and tumble dry low. Check the condition of the fabric bassinet (E) for any possible damage after each wash. In case of damage, do not use bassinet.

Sleeping Pad Care Instructions

Step 25


Remove fitted sheet, unzip sleeping pad to separate cover, core and rigid board.

Pad core: Hand rinse cold in shower or tub. Use mild detergent. Shake then air or fan dry. Avoid heat or direct sun.

Pad rigid board: Wipe down or rinse to clean and wipe dry.

Fitted sheet: Machine wash cold. Tumble dry low.


Pad cover: Zip fully closed prior to wash and dry. Machine wash cold. Tumble dry low.

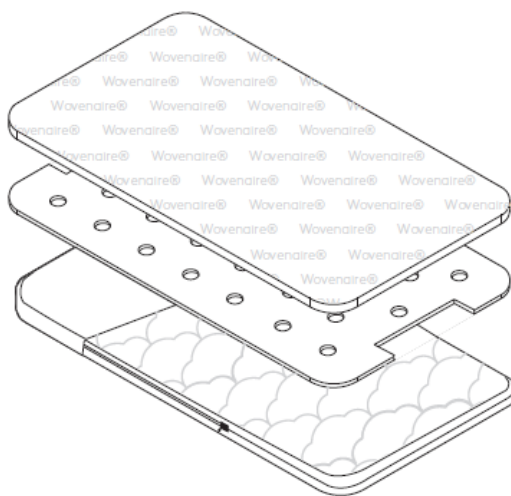

Fabric Bassinet Reattachment After Cleaning


Step 26

Hang the fabric bassinet (F) along the top tubing of main bassinet frame (A). Slide side panel top rail back into fabric bassinet (F). Then position the side panel top rail so both ends slide down into side locks with a click.

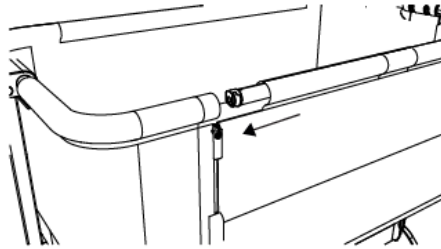

Step 27

Zip closed the fabric bassinet (F) along the back underside of the top tubing of main bassinet frame (A). Zip both front side panel zippers up and around the top rail. Fabric bassinet (F) should be fully closed in a basket configuration and attached around the full top tubing of main bassinet frame (A).

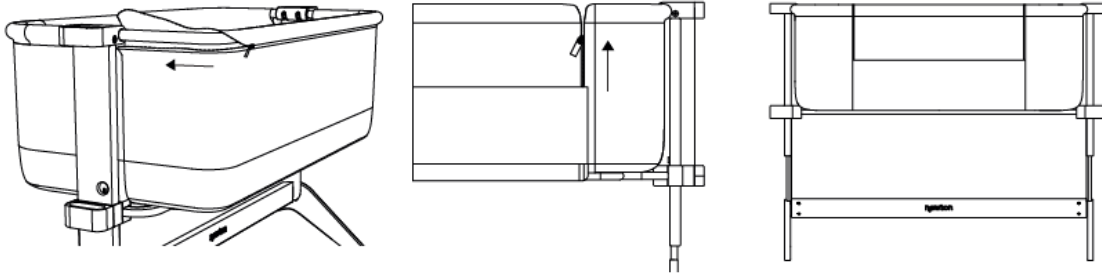

Step 28

Repeat Step 6 to secure the fabric bassinet (F) to the pad support frame (B).